



TABLE OF CONTENTS

INSTALLATION 2
HANDSET 3
BASE UNIT 4
WALL MOUNTING 4
INFORMATION ON THE LCD-DISPLAY 5
SETTINGS 5
USE OF THE PHONE 8
REGISTERING HANDSET TO THE BASE UNIT 10
THE PHONEBOOK-MEMORY 10
CALLER ID (CLIP) 13
DIRECT CALL 14
IMPORTANT SAFETY MEASURES 15





INSTALLATION

INSTALLATION OF THE HANDSET

See Illustration I

Remove the battery compartment door. → Insert three AAA Ni-MH batteries in the battery compartment. → Close the battery compartment door by pushing it back on the handset.

! When replacing the batteries, ALWAYS use good quality Ni-MH rechargeable batteries. Never use other batteries or conventional alkaline batteries! The use of wrong batteries can cause irrevocable damage to your appliance!

Important!

Before you start using your cordless phone definitely, it first has to be charged during 16 hours. You should do this WITHOUT connecting it to the telephone line.

- To charge the handset you can place it on the base unit or on the extra charger (for GLOBAL 200 & 300).
- The battery-indicator on the display indicates the status of the battery capacity.

INSTALLATION OF THE BASE UNIT

See Illustration II

- Click the plug of the adaptor in the connection plug on the bottom of the base unit (1) and plug the adaptor into the wall socket.
- Click one end of the telephone cord in the connection point on the bottom of the base unit (2) and the other end in the telephone plug.
- This telephone plug can now be plugged into the wall socket of your telephone connection point.
- On the LCD-display appears the number of the handset (H5 J), the date and the time.



M_Global_100_GB.pmd

2

GB - 2

05.10.2004, 17:17



HANDESET


See Illustration III

1.
 - To scroll through the different steps of the Programming menu.
 - To adjust the voice volume during a call.
2.
 - Activates programming and confirms the settings after changes.
 - Activates intercom communications (while using multiple handsets).
 - Transfers a call to another handset during a call (while using multiple handsets).
3.
 - Switches the microphone temporarily off during a call.
 - To delete numbers or characters.
 - Goes to the previous position in the Programming menu.During programming you can always go back to Standby-mode by keeping this key pressed during 2 sec.
4.
 - To turn on/off silence function.
 - To change a character from upper case to lower case or vice versa.
5.
 - Turns on/off key lock function.
6.
 - To call and to answer a call.
 - To switch the 'Speakerphone' function of the handset on.
 - To turn the handset on/off.
7.
 - To enter the Phonebook.
 - Could also be used as FLASH-key.
 - Press to switch to call waiting caller (while using multiple handsets).

GB - 3





8.  To take a look at the outgoing numbers.
 - Redial.
 - Could also be used as PAUSE-key.
9. LCD-display.

BASE UNIT

See Illustration IV

10. Charge-Led

This led lights during charging.



Important!
If the handset is being placed on the base unit, this led ALWAYS should light. If it does not light, this means that the handset was not placed correctly on the base unit or that the AC adaptor was not installed properly, so that the handset can not be charged.

11. Handset-search-button
12. In use and message waiting Led
13. Charge-contact points

To locate the handset. Also used to register a new handset.
This Led lights when a call is in progress. Also blinks when a voice mail is left.
Keep them clean and dust-proof to make charging possible.

WALL MOUNTING

See Illustration V

You can mount your phone on the wall by following these steps:

Install two self-tapping screws located at a distance of 5 cm from each other and on a horizontal center line. → Slowly slide the phone down until it snaps into place.



M_Global_100_GB.pmd

4



GB - 4

05.10.2004, 17:17





INFORMATION ON THE LCD-DISPLAY

- : Indicates the current signal strength. More bars indicate more signal strength.
- : Indicates that the key lock function is activated.
- : Indicates that the phone is in use mode.
- : Indicates that the Speakerphone function is active.
- : Indicates that the microphone has been temporarily switched off during a call.
- L1:** Indicates that the line is engaged.
- INT:** Indicates that the phone is in intercom conversation mode.
- : Indicates that there is a new call that you have not seen yet.
- : **This function only works if you have subscribed it with your telephone company.** Indicates the capacity of the battery. Flashes during charging.

SETTINGS

You can program different settings in the Programming menu before you start using the GLOBAL definitely.

GENERAL GUIDELINES

- The phone always needs to be in Standby-mode before you can start programming.
- To exit the Menu, you can use the **C** key.

LANGUAGE

Press the key until "HS SETTINGS" appears on the display. → Press the key. → Press the key until "LANGUAGE" appears on the display. → Press the key. → Press the key until the required language appears on the display. → Finally press the key once again to confirm the language. [You will hear a confirmation beep].

DATE & TIME

Press the key until "HS SETTINGS" appears on the display. → Press the key. → Press the key again until "SET CLOCK" appears on the display. → Press the key. → "INPUT TIME" appears on the display. → Enter the right time (Hour-Minute). → Press the key to confirm the time. [You will hear a confirmation beep]. → "INPUT DATE" appears on the display. → Enter the right date (Day-Month-Year). → Press the key to confirm the date. [You will hear a confirmation beep].

GB - 5



SETTING HANDSET NAME

Press the key until "HS SETTING" appears on the display. → Press the key. → Press the key until "USER NAME" appears on the display. → Press the key. → The display shows "NAME:". → Enter the name (max. 8 characters). → Press the key to confirm. → "STORED" appears on the display. [You will hear a confirmation beep].

EXTERNAL RINGER MELODY & VOLUME

You can choose from 9 different ringer melodies (with 9 volume levels) and 16 polyphonic ring tones (with 4 volume levels). Press the key until "HS SETTING" appears on the display. → Press the key. → Press the key again until "MELODY EXT" appears on the display. → Press the key. → Use the and key to search the required melody. → Press the key to confirm your favorite melody for all external calls. → Press the or key to choose the volume level you want. → Press the key to confirm the right external ringer volume. [You will hear a confirmation beep].

DIALING WITH OR WITHOUT SOUND SIGNAL

Press the key until "HS SETTING" appears on the display. → Press the key. → Press the key until "SET KEYTONE" appears on the display. → Press the key. → Use the key to make your choice: "ON" or "OFF". → Finally press the key to confirm your choice. [You will hear a confirmation beep].

SILENCE FUNCTION

To turn on this function, press and hold the key until the display shows "SILENCE". [You will hear a confirmation beep]. → To turn off this function, press and hold the key again until the phone returns to standby mode [You will hear a confirmation beep].

LOCKING AND UNLOCKING THE KEYPAD

If you turn this feature on, all buttons except for the key will be locked and will not function.
To lock the keypad, press and hold the key until "LOCKED" appears on the display. [You will hear a confirmation beep].
→ To unlock the keypad, press and hold the key again until the phone returns to standby mode. [You will hear a confirmation beep].

GB - 6



CHANGING HANDSET PIN

Press the **[V]** key until "HS SETTINGS" appears on the display. → Press the **[<=>]** key → Press the **[V]** key until "SET PIN" appears on the display. → Press the **[<=>]** key → "HS PIN" appears on the display. → Enter the current handset PIN (with delivery = '1590'). → Press the **[<=>]** key → "BA PIN" appears on the display. → Enter the desired PIN and press the **[<=>]** key → "RETYPE PIN" appears on the display. → Enter the new PIN once more and press the **[<=>]** key. [You will hear a confirmation beep].

-tone/pulse(*)

Press the **[V]** key until "BS SETTINGS" appears on the display. → Press the **[<=>]** key → The display shows "SETTINGS.." and then "BASE PIN". → Enter the base PIN (with delivery = '1590'). → Press the **[<=>]** key → Press the **[V]** key until "DIAL MODE" appears on the display. → Press the **[<=>]** key → Use the **[V]** key to make your choice: "TONE" or "PULSE". → Finally press the **[<=>]** key to confirm your choice. [You will hear a confirmation beep].
(*) This setting is **NOT** used in the majority of the European countries where only "TONE" dialing is available. Default setting=Tone.



FLASHKEY

The FLASH-key **[R]** offers the possibility to use various services of your telephone company or can be used as through-connect key when the GLOBAL is connected to a PBX.

Press the **[V]** key until "BS SETTINGS" appears on the display. → Press the **[<=>]** key → The display shows "SETTINGS.." and then "BASE PIN". → Enter the base PIN (with delivery = '1590'). → Press the **[<=>]** key → Press the **[V]** key until "FLASH TIME" appears on the display. → Press the **[<=>]** key → Use the **[V]** key to make your choice: you can choose 100ms, 120ms, 300ms or 600ms. → Press the **[<=>]** key to confirm [You will hear a confirmation beep].

RESET OF THE APPLIANCE



This action makes it possible to undo all the changes and to go back to the default settings.
Press the **[V]** key until "HS SETTINGS" appears on the display. → Press the **[<=>]** key → Press the **[V]** key until "SET DEFAULT" appears on the display. → Press the **[<=>]** key → "HS PIN" appears on the display. → Enter the current handset PIN (with delivery = '1590'). → Press the **[<=>]** key → "SURE" appears on the display. → Press the **[<=>]** key to confirm [You will hear a confirmation beep] or the **[C]** key to cancel.





- Important!**
- This way you can not recover the forgotten PIN-Code.
 - The handset will not be deregistered.



USE OF THE PHONE

- Important!**
- While installing the GLOBAL and placing the battery, the telephone is automatically being switched on!
 - If you wish to switch a handset completely off, you can do this as following: Press and hold the  key until "GOOD BYE" appears on the display. → The handset will not ring and the last dialed numbers will be erased from the memory.
 - To switch the handset back on after switching it off, press and hold the  key. → Your telephone is back in Standby-mode.

 



CALLING


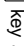 
Two possibilities:

1. Press  and enter the required telephone number.
2. Enter the required telephone number and press .

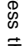

Note:

- If you enter a wrong number, press the  key once to delete 1 number and for a few seconds to delete the whole number.
- You can press the  key to insert a pause to a dialing sequence.

RECEIVING AND ENDING A CALL

Press  to answer the call. → Press the  key again to end the call.

ADJUSTING THE VOICE VOLUME

During a call you can adjust the voice volume. Choose a level from 1 to 9 by using the  or  key.





MUTE-KEY

During a call, press the [C] key to switch the microphone off. → ☒ appears on the display. [The person on the other end of the line cannot hear you, but you can hear the person on the other end of the line.] → Press the [C] key to switch the microphone back on.

SPEAKERPHONE-KEY

With this key you can switch on the Speakerphone of the handset to make a completely handsfree call.

Press and hold the [☎] key until ☎ appears on the display. → Press and hold [☎] again to switch off the microphone and to continue your conversation without Speakerphone via the handset. → Press [☎] to finally end the call.

Remark:

During a call you can adjust the volume of the speakerphone as indicated above in the chapter "Adjusting the voice volume".



REVIEWING AND DIALING THE LAST DIALED NUMBERS

With the GLOBAL you can review the 10 last numbers that were dialed with this phone.

The handset is in Standby-mode. → Press [☎] : the last dialed number appears on the display. → Press [☎] again to review the previous number. → Finally press [☎] to dial the number that is now showing on the display.

CALL DURATION

The telephone automatically shows the duration of the calls.

This remains on the display during a few seconds after the call, before it turns back to Standby-mode.

HANDESET-SEARCH-BUTTON

Press the [☎] key of the base unit very shortly to page the handset that has gone missing. → The handset beeps for about 20 seconds. → Press the [☎] key on the base unit again to stop the beeping.


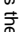 
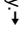 
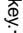 
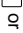 
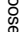 
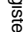 





REGISTERING HANDSET TO THE BASE UNIT

Handset 1: ^{"HS 1"} in Standby-mode you read from the display:
If i. by pressing a wrong key appears that the handset is not registered to the base unit anymore, you can still do the following:

How to proceed?

Press during 10 sec.  of the base unit. [The red led on the base unit starts to flash] → Press the  key until "HS REGISTER" appears on the display.→ Press the  key → Press the  or  key to choose a base number and press the  key.→ The display shows the register code it receives. → Press the  key.→ The display shows "PIN": → Enter the base PIN (with delivery = '1590'). → Press  to confirm. [If registering has succeeded, you will hear a confirmation beep].

Important!


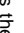 
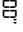 
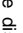 

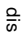 
**The base unit stays during 2 min. in registering-mode.
If registering the handset has not gone well, you could better start all over again.**



THE PHONEBOOK- MEMORY

You can store 50 names and numbers in the Phonebook of the GLOBAL.

STORING A NUMBER AND NAME IN THE PHONEBOOK-MEMORY

The phone is in Standby-mode. → Press the  key until "PHONE BOOK" appears on the display. → Press the  key. → Press the  key until "RDN" appears on the display. → Press the  key. → The display shows "NAME": → Enter the name and press the  key to confirm. → The display shows "NUMBER": → Enter the number and press the  key to confirm. → "STORED" appears on the display. [You will hear a confirmation beep.]

Operation method:

Press the key labeled with the required character: once for the first character, twice for the second, etc.

M_Global_100_GB.pmd

10

GB - 10

05.10.2004, 17:18



	1X 2X 3X 4X 5X 6X
[1]	1 [] < > - .
[Aa-2]	Aa Bb Cc 2 ▶
[Dd-3]	Dd Ee Ff 3 :
[Gg-4]	Gg Hh Ii 4 +
[Jj-5]	Jj Kk Ll 5 *
[Mm-6]	Mm Nn Oo 6 #
[Pp-7]	Pp Qq Rr Ss 7
[Tt-8]	Tt Uu Vv 8 Ææ
[Ww-9]	Ww Xx Yy Zz 9 Ññ
[0]	0 Àà Ää Öö Üü Øø



- Note:**
- To delete a wrong entry, press the [C] key.
 - Press the [*] key to change a character from upper case to lower case or vice versa.

SEARCHING A NUMBER IN THE PHONEBOOK

The phone is in Standby-mode: → Press the [▼] key until "PHONE BOOK" appears on the display: → Press the [↔] key: → Press the [▼] key: → Press the [▼] key until "ERR0" appears on the display: → Press the [↔] key: → Press the [▲] or [▼] key to scroll through the phonebook entries:

OR:

Press the [R] key in standby mode: → Press the [▲] or [▼] key to scroll through the phonebook entries.

Note: During viewing the stored entries, you can press the first character of the name to search quickly.



CALLING A NUMBER OF THE PHONEBOOK

Press the [R] key in standby mode. → Press the [▲] or [▼] key to scroll through the phonebook entries and find the required number. → Press the [↵] key to dial the desired number.

DELETING A NUMBER AND NAME FROM THE PHONEBOOK-MEMORY

Erasing a single entry

Press the [▼] key until "PHONE BOOK" appears on the display. → Press the [↵] key. → Press the [▼] key until "DELETE" appears on the display. → Press the [↵] key. → Press the [▲] or [▼] key to find the phonebook entry that you want to delete. → Press the [↵] key to confirm. → The display shows "SURE?". → Press the [↵] key to confirm. → "DELETED" appears on the display. [You will hear a confirmation beep].

Erasing all entries

Press the [▼] key until "PHONE BOOK" appears on the display. → Press the [↵] key. → Press the [▼] key until "ERASE ALL" appears on the display. → Press the [↵] key. → The display shows "SURE?". → Press the [↵] key to confirm. → "ERASE OK" appears on the display. [You will hear a confirmation beep].


EDITING A NUMBER AND NAME OF THE PHONEBOOK-MEMORY

Press the [▼] key until "PHONE BOOK" appears on the display. → Press the [↵] key. → Press the [▼] key until "EDIT" appears on the display. → Press the [↵] key. → Press the [▲] or [▼] key to find the phonebook entry that you want to change. → Press the [↵] key. → Change the name and press the [↵] key. → Change the number and press the [↵] key. → You will hear the current ring melody and on the display appears "EXT RING: X". → Press the [↵] key to confirm. → "STORED" appears on the display. [You will hear a confirmation beep].

SETTING VIP NUMBERS IN THE PHONEBOOK

With this function, you can set a different ring melody for VIP numbers. When you get a call from a VIP number, the phone will ring with the matching melody that you have set.

Press the [▼] key until "PHONE BOOK" appears on the display. → Press the [↵] key. → Press the [▼] key until "EDIT" appears on the display. → Press the [↵] key. → Press the [▲] or [▼] key to find the phonebook entry that you want to change. → Press the



[↔] key. → Change the name and press the [↔] key. → Change the number and press the [↔] key. → You will hear the current ringtone melody and on the display appears "EXT RING: X". → Press the [▲] or [▼] key to choose the desired ringtone melody for this number. → Press the [↔] key to confirm. → "STORED" appears on the display. [You will hear a confirmation beep].

CALLER ID (CLIP)

Before you can use this service, you first have to take a Caller ID-subscription with your telephone company.

- With Caller ID you can see, before you pick up the phone, the number of the person that is calling you on the display of the GLOBAL. If this number already has been stored in your Phonebook, the name also appears on the display.
- However, this is not the case if the caller has blocked the CLIP-function. The display will show "PRIVATE".
- If the caller calls from an area where the telephone company is not offering the Caller ID service or an area that is not yet providing name and number delivery to your area via the long distance network, the display will show "OUT OF REACH".
- With Caller ID you can also see all the numbers that called you during your absence.
- You can call these numbers directly and/or store them in the Phonebook.
- If you have a voice mail service from your telephone company and a message is left, the message waiting indicator on the base will flash until you have got your voice mail from your telephone company. The display will also show "MESSAGE WAITING".
- The GLOBAL has a Caller ID memory of 50 numbers.

REVIEWING NUMBERS

Press the [▼] key until "CALLER ID" appears on the display. → Press the [↔] key. → Press the [▲] key until "REVIEW" appears on the display. → Press the [↔] key to confirm. → The display shows the last caller's number (and possibly the name), and the date and time. → Press the [▲] or [▼] key to scroll through the Caller ID list.

CALLING NUMBERS FROM THE CALLER ID LIST

Find the Caller ID number that you want to dial, as described above in the chapter "Reviewing numbers". → Press the [↔] key to dial the desired number.



STORING NUMBERS FROM THE CALLER ID LIST IN THE PHONEBOOK

Find the Caller ID number that you want to store in the phonebook, as described above in the chapter "Reviewing numbers".
→ Press the [R] key to confirm and the display shows "PHONE BOOK". → Press the [↵] key to confirm. → "NAME" appears on the display. → Enter the name and press the [↵] key to confirm. → The display shows "STORE". [You will hear a confirmation beep].

DELETING NUMBERS FROM THE CALLER ID LIST

Erasing a single entry

Press the [▼] key until "CALLER ID" appears on the display. → Press the [↵] key. → Press the [▼] key until "DELETE" appears on the display. → Press the [↵] key to confirm. → Press the [▲] or [▼] key to find the number that you want to erase. → Press the [↵] key to confirm. → "SURE" appears on the display. → Press the [↵] key to confirm [You will hear a confirmation beep] or the [C] key to cancel.

Erasing all entries

Press the [▼] key until "CALLER ID" appears on the display. → Press the [↵] key. → Press the [▼] key until "ERASE ALL" appears on the display. → Press the [↵] key to confirm. → "SURE" appears on the display. → Press the [↵] key to confirm or the [C] key to cancel. [You will hear a confirmation beep].



DIRECT CALL

WHEN DO YOU USE THIS FUNCTION?

If you program a number under "HOT CALL" and turn it ON, this number will be automatically dialed if you press any key.

Example: If your child is home alone and you wish to be reachable in a very easy way, you can program under "HOT CALL" your mobile phone number for instance. This number will then be dialed immediately by pressing any key of the GLOBAL.

PROGRAMMING THE DIRECT CALL NUMBER

Press the [▼] key until "HS SETTINGS" appears on the display. → Press the [↵] key. → Press the [▼] key until "HOT CALL" appears on the display. → Press the [↵] key. → Enter the desired number. → Press the [↵] key to confirm. → "DIRECT CALL" appears on the display. [You will hear a confirmation beep]. → This Direct Call number will now be dialed automatically if you press any key.

GB - 14



TURNING THE DIRECT CALL NUMBER OFF

Press the **[R]** key twice. [You will hear a confirmation beep]. → The phone will return to Standby mode.

IMPORTANT SAFETY MEASURES

- When you charge this product, a certain amount of heat will be produced.
- Do not put this product on antique, veneered or wooden surfaces to avoid damage.
- To avoid interference with other electronic appliances, such as a TV, radio or PC, you should place this product at least 1 meter away.
- The effective range of this product is dependant on the local environment, such as building materials, the proximity of dense trees, ponds, lakes or the sea.
- Do not use this product near water or in a damp environment, such as a bathroom.
- Do not expose this product to fire, direct sunlight or intense heat.
- For safety measures do not use this product near a gas-leak that you found and want to report.
- Clean this product with a damp anti-static cloth.
- Do not use fluid detergents or sprays.



M_Global_100_GB.pmd

15



GB - 15

05.10.2004, 17:18

