



TABLE OF CONTENTS

WHAT IS IN THE BOX?.....	2
INSTALLATION OF MR SAFE	2
SETTING CALLS TO CARE PROVIDERS (FAMILY, NEIGHBOURS, ETC.).....	4
RECORDING ALARM MESSAGES AND INSTRUCTION MESSAGES.....	5
SETTING THE QUIET ALARM OR MODIFYING THE TIME OF THE LOUD ALARM.....	5
WHAT CAN A REMOTE CARE PROVIDER DO?.....	6
LOGGING ON THE REMOTE CONTROL.....	6
POWER SUPPLY FAILURE / BATTERIES.....	7
EXTRA SETTINGS.....	7
SUPPORT AND GUARANTEE.....	8





2

Introduction

Congratulations! You have acquired the mr Safe personal security system. Security is important. Care providers should be reachable as soon as possible, if necessary. Your mr Safe will make sure of that.

Before using the system for the first time, we suggest that you read this manual to make sure that you know all the main features and possibilities.

WHAT IS IN THE BOX?

- Remote control on batteries.
- Adapter for the station.
- Telephone cord.
- 2 screws and 2 plugs for wall mounting.
- mr Safe station (see Illustration 1&2).
 - a. Adapter connector.
 - b. Telephone line connector.
 - c. Connector for extra telephone set.
 - d. Cable guides.
 - e. Battery case.
 - f. Assembly grooves.
 - g. Alarm button 1.
 - h. Alarm button 2.
 - i. Alarm stop button.
 - j. Display.
 - k. LEDs.
 - l. Setkeys.
- Short reference guide.
- 4AAA batteries.



INSTALLATION OF MR SAFE

ADAPTER

At the back of the mr Safe station there are 3 connectors. The left connector is for the adapter cable. The adapter is to be inserted into a socket and is applicable for 230VAC / 50 Hz. The socket-outlet should be installed near the equipment and shall be easily accessible.

TELEPHONE LINE

The telephone cable is to be connected to the middle connector at the back of the mr Safe station. The other end of the telephone cable is to be connected to the telephone line. The use of a switching system between the mr Safe and the telephone line is not encouraged because of the risk of a power supply failure. If you need to dial a '0' with your ordinary telephone set when dialling the telephone number, you have to set the switching system or ISDN adapter at 'direct outward dialling system'.

English





3

EXTRA TELEPHONE SET

The right connector allows the mr Safe station to be connected in-between the analogous PTT line and your telephone set. This way, it is not necessary to buy an extra socket or transit connector.

CABLE GUIDANCE

Depending on where you would like to install the mr Safe station, you can guide the cables upwards or downwards.

BATTERIES

As the mr Safe station needs to continue operating in case of a temporary power supply failure, some batteries are to be inserted. To this effect, you can remove the screw from the battery cover and open the battery case. The batteries are to be positioned as indicated in illustration 1. The mr Safe operates on 4 AAA alkaline batteries.

MOUNTING

The mr Safe station is prepared for wall mounting. To this effect, you place the 2 supplied screws (with the plugs if necessary) at a distance of 6.2 cm from one another in the wall.

The mr Safe station is equipped with 2 rubber caps and 2 hard plastic supports for horizontal positioning. mr Safe is not liable for any damage that may be caused to your furniture.



SETTING THE CLOCK

To realize some settings, you need to open the little flap on the front. On both sides of this flap, edges are made for convenience. The date and time are to be set as follows:

- Press the PROG key.
 - Then press the # key.
 - Enter the date (day and month) and the time.
 - Again press the PROG key.
- For example 1 April, 9:30 is to be set as follows: PROG, #, 01 04 09 30, PROG.

SETTING TELEPHONE LINE

Nearly all the telephone lines are tone-operated. When your ordinary telephone set is tone-operated, you will hear tones when dialling a number. This is the default setting of the mr Safe station.

In case of older telephone lines, the pulse-operated mode is to be set. In this case, you will hear pulses when dialling a number with your ordinary telephone set.

The above setting is effected as follows:

- Press PROG.
- Press 3 and then 1.
- Again press PROG.

After pressing 1, you will see **PULS** appear on the display.

English



If you want to switch back the mr Safe station to tone-operated, you have to follow this procedure:

- Press PROG.
- Press 3 and then 0.
- Again press PROG.

After pressing 0, you will see **TON** appear on the display. If you have a switching system or ISDN adapter, you have to set the same at 'direct outward dialling system'. This way, it is not necessary to dial an extra 0 prior to the telephone number.

CHECKING THE INSTALLATION

If the telephone line, adapter and batteries are properly placed, the device is in standby, and the green 'Power' LED is burning. If also the red 'Batt. Lo' LED is burning, the batteries are almost empty or not properly placed. In this case, the batteries need to be replaced. If you press one of the alarm keys of the mr Safe station or remote control for at least 2 seconds, you will hear the alarm tone from the mr Safe station. As soon as this tone stops, the mr Safe station will contact the care providers. To this effect, you need to set the telephone numbers and alarm messages first. This is described in the following chapters.

SETTING CALLS TO CARE PROVIDERS (FAMILY, NEIGHBOURS, ETC.)

The mr Safe system has 2 different alarm buttons, a red one and a blue one. These can be set distinctively, in various ways: for example loud and quiet alarm, urgent and less urgent alarm, or day and night alarm. It is possible to enter a maximum of 4 telephone numbers per alarm button, eg. of family, neighbours, acquaintances etc., the so-called informal care.

The setting of these telephone numbers is realized as follows:

- Press PROG.
 - Press the alarm button where you want to enter a telephone number.
 - Choose 1, 2, 3 or 4 for the first, second, third or fourth alarm number.
 - Enter the telephone number.
 - Press PROG.
- We advise you to write down the entered telephone numbers in this manual. See last page of the manual. Apart from that, it is possible to verify the set telephone numbers:
- Press PROG.
 - Press the alarm button of which you would like to verify the numbers.
 - Press 1, 2, 3 or 4 for the first, second, third or fourth alarm number.
 - Now the set number is displayed. Press STOP to exit.



RECORDING ALARM MESSAGES AND INSTRUCTION MESSAGES

When the other care providers (family, neighbours etc.) are called, after picking up the telephone, they will hear a warning message 'Alarm, press 5'. After pressing '5', they will hear an alarm message and then an instruction message. In addition, the care provider can realize a handsfree speaker connection, turn off the alarm, or transfer the alarm.

Per alarm key an alarm message of a maximum of 40 seconds is to be recorded, for example: "This is an alarm call from Joseph, Problemstreet 1, OurVillage".

This is the procedure to follow:

- Press PROG and then 1.
- Press the alarm button for which you want to record the alarm message.
- Press PROG to start recording.
- Press PROG to confirm recording.

The instruction message can not be longer than 30 seconds, for example: "Press 2 to open a handsfree speaker connection. Press 6 to send this alarm call to others or press 5 to repeat the text". This is the procedure to follow:

- Press PROG and then 1 and then *
- Press PROG to start recording.
- Press PROG to confirm recording.

It is also possible to listen to the recorded texts, without any adaptations or modifications.

Listening to the alarm message:

- Press PROG, and then 2.
 - Press the alarm button for which you want to listen to the alarm message.
 - Press PROG to stop.
- Listening to the instruction message:
- Press PROG, then 2 and then *
 - Press PROG to stop.



SETTING THE QUIET ALARM OR MODIFYING THE TIME OF THE LOUD ALARM

Per alarm button, you can set the loud or quiet alarm. In addition, you can set the time for which the loud alarm must continue. The options are: 1, 5, 10, 30 or 60 seconds. After this time, the mr Safe station will start calling the care providers.

- Setting the quiet alarm, is as follows:
- Press PROG and then 4.

English





6

- Press the alarm button for which you want to set a quiet alarm.
Press 0 and then PROG.
- Setting the loud alarm, is as follows:
 - Press PROG and then 4.
 - Press the alarm button for which you want to set a loud alarm.
 - Then press 1 to turn on the loud alarm.
 - Now press * as long as you have reached the number of seconds you have chosen for the loud alarm to sound.
 - Press PROG.

WHAT CAN A REMOTE CARE PROVIDER DO?

If a care provider is called by the mr Safe station, it is first established that the telephone has been picked up (a warning message will be heard). Then the alarm message and instruction message are passed on.

Then the care provider can accept the call for help by pressing a number key on his/her telephone set. To this effect, the care provider's telephone set must be set in the 'tone-operated' mode. The possible number keys are:

- 5: Repeat message.
 - 8: Listen to the area where the mr Safe station is.
 - 2: Talk handstree with the area where the mr Safe station is.
 - 6: Stop the call to this care provider, and transfer it to other programmed care providers.
 - 4: Stop the call as such.
- If no key is pressed, the mr Safe station will be calling another care provider.



LOGGING ON THE REMOTE CONTROL

If you want to log on a new remote control, this is the procedure to follow:

- Press PROG and then *.
 - Enter the pincode (1 1 1 1).
 - Press 1.
 - Press and hold for about 1 sec. the red alarm button on the remote control twice.
- The new remote control is now logged on.

You can verify how many remote controls are logged on by following this procedure:

- Press PROG, and then 5 1.

English





7

POWER SUPPLY FAILURE / BATTERIES

The remote control is equipped with a battery. This battery can be checked in the following ways:

- Press PROG and then 5.2.
- Press an alarm button on the remote control.
- The display will show the number of the remote control and the battery status (Hi=Full or Lo=Almost empty).

Between the remote control and the mr Safe station, from time to time, it is verified whether the batteries of the remote control are low. If this is the case, it will be indicated on the mr Safe station. The display will show 'tr bt Lo 90' and start to count for 90 seconds.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose to the instruction.

In the mr Safe station, there are 4 AAA Alkaline batteries. In case of a power supply failure, these batteries will make sure that the mr Safe station will continue operating for a maximum period of 48 hours. If the batteries are low, the 'Batt Lo' LED will burn until the batteries are empty. Also, the display will show 'Bat Lo 90' and start to count down for 90 seconds.



EXTRA SETTINGS

It is of the utmost importance that an alarm call is never lost. Therefore, a number of measures have been taken, so as to safeguard this up to a maximum:

- a. If instead of a care provider, an answering machine or voice mail receives the telephone call, this will not be accepted by the mr Safe station. Only if key 4 is pressed on the care provider's telephone set, the call is stopped.
- b. If none of the care providers answer the telephone, it may be set that all the care providers will be called a couple of times more (up to 9 times). The default setting is 4 recalls. To modify, please follow this procedure:
 - Press the PROG key and then 7.
 - Choose the alarm button for which you want to set the recalls.
 - Press a number (1..9) to set the number of recalls.
 - Press PROG.

When calling the care providers, the mr Safe station will have to establish whether the telephone is picked up. The mr Safe station will do that by listening to the tones as

English





8



transmitted by the PTT station. If you call some foreign destinations, if you have a fax-selector or if you use special equipment, the mr Safe station cannot establish whether the telephone has been picked up. In this case, a special setting is to be activated, following this procedure:

- Press PROG and then 0.
- Choose the alarm button for which you want to activate the setting.
- Press 1, 2, 3 or 4 to select the telephone number which gives trouble establishing whether the telephone has been picked up.
- Press 1 to activate 'Basic Mode'.
- Press PROG to confirm.

If it is no longer necessary to use 'Basic Mode', you can deactivate it in the same way. Instead of 1 for 'Basic Mode' you then press 0 for 'Advanced Mode'.

SUPPORT AND GUARANTEE



The mr Safe station comes with a 2-year guarantee. Also the remote control comes with a 2-year guarantee, but any damage that may be caused by mechanical failure, moisture etc. is excluded from the guarantee. Any consequential damage is also excluded from the guarantee; this constitutes an end-user responsibility.

For any further questions about the use of the mr Safe station, please feel free to contact your local dealer.

English

