



TABLE OF CONTENTS

INSTALLATION 2
HANDSET 3
BASE UNIT 4
INFORMATION ON THE LCD-DISPLAY 4
SETTINGS 5
SETTING CALLS TO CARE PROVIDERS (FAMILY, NEIGHBOURS,..) 9
USE OF THE PHONE 13
REGISTERING HANDSET TO THE BASE UNIT 15
THE PHONEBOOK-MEMORY 16
CALLER ID (CLIP) 18
DIRECT CALL 19
IMPORTANT SAFETY MEASURES 20





INSTALLATION

INSTALLATION OF THE HANDSET

see Illustration I

- Remove the belt clip of the handset.
- Remove the battery compartment door.
- Connect the white connector of the rechargeable battery with the connector in the appliance.
- Close the battery compartment door by pushing it back on the handset.
- If you wish you can put the belt clip back on the handset.

Important!

Before you start using your cordless phone definitely, it first has to be charged during 16 hours. You should do this without connecting it to the telephone line.

- To charge the handset you can place it on the base unit.
- The battery-indicator on the display indicates the status of the battery capacity.
- The battery capacity is 7 days in Standby-mode and 6 hours conversation.

INSTALLATION OF THE BASE UNIT

see Illustration II

- Click the plug of the adaptor in the connection plug on the bottom of the base unit (2) and plug the adaptor into the wall socket.
- Click one end of the telephone cord in the connection point on the bottom of the base unit (1) and the other end in the telephone plug.
- This telephone plug can now be plugged into the wall socket of your telephone connection point.

Important!

If you install the SAFE DECT correctly, a connection between the handset and the base unit will be made automatically.




 




On the LCD-display appears the number of the base unit (BU-1) and of the handset (HS-1).

GB - 2



HANDESET

see Illustration III

1.  • To call and to answer a call.
 - To start the alarm.
2.  • To go through the different steps of the Programming menu.
 - To take a look at the date & time of the number stored in the Caller ID memory.
 - Could also be used as FLASH-key.
3.  • Switches the microphone temporarily off during a call.
 - To delete numbers or characters.
 - Goes to the previous position in the Programming menu.
4.  • To adjust the voice volume during a call.
 - During programming you can always go back to Standby-mode by keeping this key pressed during 2 sec.
5.  • Redial.
 - Could also be used as PAUSE-key.
6.  • To display the numbers of the Phonebook.
7.  • Activates programming and confirms the settings after changes.
 - To stop the alarm.
8.  • To go through the different steps of the Programming menu.
 - To take a look at the numbers of the Caller ID memory.
 - To switch the 'Speakerphone' function of the handset on.
9. • Keypad.
10. • LCD-display.
11. • Charge-contact points. Keep them clean and dust-proof to make charging possible.



GB - 3





BASE UNIT

See Illustration IV


- 1: Charge-Led This led lights during charging and flashes during calling.






Important!

If the handset is being placed on the base unit, this led ALWAYS should light. If it does not light, this means that the handset was not placed correctly on the base unit or that the AC adaptor was not installed properly, so that the handset can not be charged.

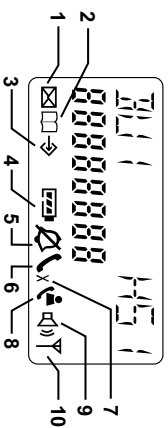- 2: Handset-search-button To locate the registered handset.

INFORMATION ON THE LCD-DISPLAY



1.  If somebody leaves a message in your mailbox, this icon will appear.
This function only works if you have subscribed it with your telephone company.
This only functions correctly if your telephone company uses FSK-Caller ID (not for KPN-network).
2.  Indicates that you are active in the Phonebook.
3.  Indicates that you are active in the Programming menu.
4.  Indicates the capacity of the battery.
 Flashes when the capacity of the battery is starting to get low.

GB - 4



5. Indicates when the ringtone volume is switched off.
6. Indicates a conversation.
Flashes when you receive a call.
7. Indicates that the microphone has been temporarily switched off during a call.
8. Indicates that some numbers are stored in the Caller ID memory.
Flashes when a new call that you have not seen yet, has been stored.
This function only works if you have subscribed it with your telephone company.
9. Indicates that the 'Speakerphone'-function is active.
10. Indicates that the handset is within effective range of the base unit.
Flashes when the handset is too far out of range of the base unit.

SETTINGS

You can programme different settings in the Programming menu before you start using the SAFE DECT definitely.

GENERAL GUIDELINES

- The phone always needs to be in Standby-mode before you can start programming.
- To exit the Menu, you can use the key.
- During programming **NEVER** wait longer than 5 sec. before continuing with the next step.

LANGUAGE

Press the key, → Press the key until "SETTINGS" appears on the display. → Press the key, → Press the key again until "LANGUAGE" appears on the display. → Press the key, → Use the key until the required language appears on the display. → Finally press the key once again to confirm the language. [You will hear a confirmation beep].

GB - 5

M_Safe_Deact_GB_pmd

5

21.12.2004, 11:01



DATE & TIME

Press the $\left(\rightleftharpoons\right)$ key. → Press the $\left(\uparrow\right)$ key until "SETTINGS" appears on the display. → Press the $\left(\rightleftharpoons\right)$ key. ["DATE/TIME" appears on the display]. → Press the $\left(\rightleftharpoons\right)$ key. ["YEAR" appears on the display]. → Enter the right number of the year (i.e. 05 for 2005). → Press the $\left(\rightleftharpoons\right)$ key to confirm. ["MONTH" appears on the display]. → Enter the right month. → Press the $\left(\rightleftharpoons\right)$ key to confirm the month. ["DAY" appears on the display]. → Enter the right day. → Press the $\left(\rightleftharpoons\right)$ key to confirm. ["HOUR" appears on the display]. → Enter the right hour. → Press the $\left(\rightleftharpoons\right)$ key to confirm. ["MINUTE" appears on the display]. → Enter the right minutes. → Press the $\left(\rightleftharpoons\right)$ key to confirm. [You will hear a confirmation beep].

RINGER MELODY

You can choose from 9 different ringer melodies.

Press the $\left(\rightleftharpoons\right)$ key. → Press the $\left(\uparrow\right)$ key until "RING SEL" appears on the display. → Press the $\left(\rightleftharpoons\right)$ key. ["EXTERNAL" appears on the display]. → Press the $\left(\rightleftharpoons\right)$ key. ["MEL001" appears on the display]. → Press the $\left(\rightleftharpoons\right)$ key once again and use the $\left(\uparrow\right)$ and $\left(\downarrow\right)$ key to search the required melody. → Press the $\left(\rightleftharpoons\right)$ key to confirm your favourite melody for all external calls. [You will hear a confirmation beep].

RINGER VOLUME

You can choose from 9 different ringer volume levels.

Press the $\left(\rightleftharpoons\right)$ key. → Press the $\left(\uparrow\right)$ key until "RING SEL" appears on the display. → Press the $\left(\rightleftharpoons\right)$ key. ["EXTERNAL" appears on the display]. → Press the $\left(\rightleftharpoons\right)$ key and then the $\left(\uparrow\right)$ key. ["VOL001" appears on the display]. → Press the $\left(\rightleftharpoons\right)$ key and then use the $\left(\uparrow\right)$ & $\left(\downarrow\right)$ key to search the required ringer volume. → Finally press the $\left(\rightleftharpoons\right)$ key to confirm the right external ringer volume. [You will hear a confirmation beep].

Important!

If you choose for volume-level '0', the ringer tone will be switched off completely.
🔕 appears on the display.

GB - 6



DIALING WITH OR WITHOUT SOUND SIGNAL

Press the $\left(\leftarrow\right)$ key. → Press the $\left(\leftarrow\right)$ key until "KEY SETUP" appears on the display. → Press the $\left(\leftarrow\right)$ key, the $\left(\leftarrow\right)$ key and finally the $\left(\leftarrow\right)$ key again. → Use the $\left(\leftarrow\right)$ key to make your choice: "LEFT ON" or "LEFT OFF". → Finally press the $\left(\leftarrow\right)$ key to confirm your choice. [You will hear a confirmation beep].

LOCKING AND UNLOCKING THE KEYPAD

Press the $\left(\leftarrow\right)$ key. → Press the $\left(\leftarrow\right)$ key until "KEY SETUP" appears on the display. → Press the $\left(\leftarrow\right)$ key. ["KEY LOCK" appears on the display]. → Press the $\left(\leftarrow\right)$ key and then use the $\left(\leftarrow\right)$ key to make your choice: "LOCK" (to lock the keypad) or "UNLOCK" (to unlock the keypad). → Finally press the $\left(\leftarrow\right)$ key to confirm your choice. [You will hear a confirmation beep].

PROGRAMMING A PIN-CODE

A number of functions, like f.i. "Blocking numbers" of the SAFE DECT only can be programmed with a PIN-Code. PIN-Code with delivery = '0000'.



How to change this PIN-Code?

Press the $\left(\leftarrow\right)$ key. → Press the $\left(\leftarrow\right)$ key until "SETTING" appears on the display. → Press the $\left(\leftarrow\right)$ key and then the $\left(\leftarrow\right)$ key until "PIN-LOCK" appears on the display. → Press the $\left(\leftarrow\right)$ key once again. → Enter your old PIN-Code (with delivery = '0000') followed by $\left(\leftarrow\right)$. → Enter now your new PIN-Code (max. 8 numbers) followed by the $\left(\leftarrow\right)$ key. → Enter your new PIN-Code once again followed by $\left(\leftarrow\right)$. [You will hear a confirmation beep].

BLOCKING NUMBERS

You can block several numbers with the SAFE DECT. The number you blocked has a max. of 5 numbers.

Examples of possible blocked numbers are:

- '00': international numbers can not be dialled if '00' is programmed as a blocked number.
- '06' or '0475': mobile numbers that begin with f.i. '06' or '0475' can not be dialled if they are programmed as blocked numbers.
- '0900': can also be programmed as a blocked number.

GB - 7



HOW TO BLOCK A NUMBER?

Press the key. → Press the key until "SETTING" appears on the display. → Press the key and then the key until "BLOCKED" appears on the display. → Press the key and enter your PIN-Code (with delivery = '0000'). → Press the key again and enter the number that you would like to block. → Press the key and enter 1. → Press the key to confirm the blocking. [You will hear a confirmation beep].

To programme multiple blocked numbers (max. 5), you proceed the same way as written above.

Only after entering your PIN-Code you press the key to block the next number.

On the display appears "BLOCKED".

Then you proceed with the different steps as written above.

HOW TO DELETE A BLOCKED NUMBER?

Press the key. → Press the key until "SETTING" appears on the display. → Press the key and then the key until "BLOCKED" appears on the display. → Press the key and enter your PIN-Code (with delivery = '0000'). → Press the key once. → Now simply use the key to delete the programmed blocked numbers. → Press the key to confirm. [You will hear a confirmation beep].

ZONE/PULSE (*)

Press the key. → Press the key until "SETTING" appears on the display. → Press the key. → Press the key once again until "ZONE/PULSE" appears on the display. → Press the key. ["ZONE" appears on the display]. → Use the key to make your choice: "ZONE" or "PULSE". → Finally press the key to confirm your choice. [You will hear a confirmation beep].

(*) This setting is **NOT** used in the majority of the European countries where only "TONE" dialling is available.

'RESET' OF THE APPLIANCE

This action makes it possible to undo all the changes and to go back to the default settings (ringer volume, ringer melody, language, keytones, blocked numbers,...).

GB - 8



Press the key. → Press the key until "SETTING" appears on the display. → Press the key. → Press the key once again until "RESET" appears on the display. → Press the key and enter your PIN-Code (= '0000' with delivery).
→ Press the key once again to confirm the 'RESET'. [You will hear a confirmation beep].

Important!

- This way you can not recover the forgotten PIN-Code.
- The memory of the Phonebook is not being erased.
- The handset will not be deregistered.

DEFAULT SETTINGS

Key lock	Unlock
Key click	Click on
Earpiece volume	Level 3
External ringer	Melody 1
External ringer	Volume 5
Language	English
PIN code	Unchanged

SETTING CALLS TO CARE PROVIDERS (FAMILY, NEIGHBOURS,...)

With your SAFE DECT it is possible to enter a maximum of 4 telephone numbers from family, neighbours, acquaintances, etc. In case of an emergency these people can be warned automatically by simply pressing the orange key during 5 seconds.

How to set these telephone numbers:

Press the key. → Press the key until "EMERG CALL" appears on the display. → Press the key. → Press the key until "DRL L15" appears on the display. → Press the key. ["TEL" appears on the display]. → Choose with the and

GB - 9



[F4] key for number 1, 2, 3 or 4 or for the first, second, third or fourth alarm number. → Press the **[↔]** key. → Press the **[R↓]** key until "R00" appears on the display. → Press the **[↔]** key. → Enter the telephone number. → Press the **[↔]** key to confirm. [You will hear a confirmation beep].

We advise you to write down the entered telephone numbers in this manual. Furthermore it is possible to **verify** the entered telephone numbers:

Press the **[↔]** key. → Press the **[R↓]** key until "ENERG LRL" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** key until "DIRL L5T" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** and **[F4]** key to verify the entered alarm numbers.

- to edit:

Press the **[↔]** key. → Press the **[R↓]** key until "ENERG LRL" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** key until "DIRL L5T" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** and **[F4]** key to select the number that you would like to edit. → Press the **[↔]** key. ["EDIT" appears on the display]. → Press the **[↔]** key. → Edit the number and in order to do this you can use the **[X]** key. → Press the **[↔]** key to confirm the correct number. [You will hear a confirmation beep].

- to delete:

Press the **[↔]** key. → Press the **[R↓]** key until "ENERG LRL" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** key until "DIRL L5T" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** and **[F4]** key to select the number you would like to delete. → Press the **[↔]** key. → Press the **[R↓]** key until "DELETE" appears on the display. → Press the **[↔]** key. ["DELETE" appears on the display]. → Press the **[↔]** key to confirm. [You will hear a confirmation beep].

If you wish you can also change the places of the alarm numbers.

Press the **[↔]** key. → Press the **[R↓]** key until "ENERG LRL" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** key until "DIRL L5T" appears on the display. → Press the **[↔]** key. → Press the **[R↓]** and **[F4]** key to select the number you would like to change the place of. [For example: You would like to set telephone number 3 as second alarm number]. → Press the **[↔]** key. → Press the **[R↓]** key until "TYPE RBBLE" appears on the display. → Press the **[↔]** key to confirm. [You will hear a confirmation beep].

GB - 10



RECORDING THE ALARM AND INSTRUCTION MESSAGE

When the care providers (family, neighbours...) are called, they will first hear a warning message after answering the phone: 'Alarm! Press 5!'. When the care provider pressed '5', he/she will hear the alarm message accordingly, followed by the instruction message. In addition the care provider can realize a handsfree speaker connection, switch off or transfer the alarm. The alarm message can have a maximum duration of 40 seconds, for example: "This is an alarm message from Peter, Problemstreet 1, Our Village."

How to record an alarm message:

Press the key until "ENERG CALL" appears on the display. → Press the key. ["VOICE MESS" appears on the display]. → Press the key. ["RECORDING" appears on the display]. → Press the key. ["START" appears on the display]. → Press the key to start recording. → Press the key to confirm.

The instruction message can have a maximum duration of 20 seconds, for example: "Press '2' to open a handsfree speaker connection. Press '6' to transfer this alarm call to others or press '5' to repeat the text."

How to record an instruction message:

Press the key until "ENERG CALL" appears on the display. → Press the key. → Press the key until "STR MESS" appears on the display. → Press the key. ["RECORDING" appears on the display]. → Press the key. ["START" appears on the display]. → Press the key to start recording. → Press the key to confirm.

It is also possible to listen to the recorded messages, without adapting or editing them.

Listening to the alarm message:

Press the key. → Press the key until "ENERG CALL" appears on the display. → Press the key. ["VOICE MESS" appears on the display]. → Press the key. → Press the key until "ALARMING" appears on the display. → Press the key to listen to the alarm message. → Press the key to stop.

Listening to the instruction message:

Press the key. → Press the key until "ENERG CALL" appears on the display. → Press the key. → Press the key until "STR MESS" appears on the display. → Press the key. → Press the key until "ALARMING" appears on the display. → Press the key to stop.

GB - 11



If you wish to edit the alarm or instruction message, you first have to erase the previously recorded message.

Erasing the alarm message:

Press the key. → Press the key until "ENERG FALL" appears on the display. → Press the key. ["DULE ME55" appears on the display]. → Press the key. → Press the key until "RENDRL" appears on the display. → Press the key. ["RENGE" appears on the display]. → Press the key to confirm. [You will hear a confirmation beep].

Erasing the instruction message:

Press the key. → Press the key until "ENERG FALL" appears on the display. → Press the key. → Press the key until "STR ME55" appears on the display. → Press the key. → Press the key until "RENDRL" appears on the display. → Press the key. ["RENGE" appears on the display]. → Press the key to confirm. [You will hear a confirmation beep].

SETTING THE LOUD ALARM

With your SAFE DECT you can set a quiet or loud alarm.

How to set the loud alarm:

Press the key. → Press the key until "ENERG FALL" appears on the display. → Press the key. → Press the key until "RLRL" appears on the display. → Press the key. → Press the and key to switch the loud alarm on or off. [If you choose "OFF", the quiet alarm is selected, so that somebody in the same room as you, can not hear the alarm]. → Press the key to confirm your choice. [You will hear a confirmation beep].

SWITCHING THE ALARM ON

When you would like to warn a care provider, you have to switch on the alarm by pressing the key during 5 seconds. The SAFE DECT will automatically call the preprogrammed telephone numbers.

SWITCHING THE ALARM OFF

How to switch off the alarm:

Press the key during 5 seconds. ["ERLL OFF" appears on the display]. → Press the key to confirm. → The alarm is being switched off and the SAFE DECT will turn back to Standby-mode.

WHAT CAN A REMOTE CARE PROVIDER DO?

When a care provider is being called, he/she will first hear a warning message: "Alarm! Press 5!" after answering the call.



When the care provider pressed '5', he/she will hear the alarm message accordingly, followed by the instruction message. The care provider needs to press a number key on his phone accordingly. To this effect the telephone needs to be set to Tone-mode (see pg. 8).

The possible number keys are:

- 2 – Talk handsfree with the area where the SAFE DECT is located.
- 4 – Stop the call as such.
- 5 – Repeat the message.
- 6 – Stop the call to this care provider and transfer the call to other preprogrammed care providers.
- 8 – Listen to the area where the SAFE DECT is located.

If no key is pressed, the SAFE DECT will call another care provider.

EXTRA SETTINGS

It is of the utmost importance that an alarm call is never lost. That's why some measures have been taken into account to guarantee this as good as possible.

a/ If instead of a care provider an answering machine or voice mail receives the call, this will not be accepted by the SAFE DECT. Only if key '4' is pressed on the telephone of the care provider, the call is stopped.

b/ If none of the care providers accept the call, it may be set that all care providers are called a couple of times more (up to 9 times). The default setting is 3 recalls. How to modify the number of recalls:

Press the key. → Press the key until "ENTER CALL" appears on the display. → Press the key. → Press the key until "CALLS LEFT" appears on the display. → Press the key. → Press a number key (1...9) to set the number of recalls. → Press the key. [You will hear a confirmation beep].

USE OF THE PHONE

Important!

- While installing the SAFE DECT and placing the battery, the telephone is automatically being switched on!
- If you wish to switch a handset completely off, you can do this as following:
 1. Press the key and use the key until "POWER OFF" appears on the display.

GB - 13



2. Press **[*]** to confirm.
The handset will not ring and the last dialled numbers will be erased from the memory.
- To switch the handset back on after switching it off, press any key.
 - Your telephone is back in Standby-mode.
 - It is recommendable to place the phone always in Standby-mode.

CALLING

Two possibilities:

1. Press **[*]** and enter the required telephone number.
2. Enter the required telephone number and press **[*]**.
This way the telephone number appears twice as large on the display.
If you enter a wrong number, press the **[*]** key once to delete 1 number and for a few seconds to delete the whole number.

RECEIVING AND ENDING A CALL

When you receive a call, you will hear a sound signal on the handset:
Press **[*]** to answer the call. → Press the **[*]** key again to end the call.

ADJUSTING THE VOICE VOLUME

During a call you can adjust the voice volume.
You can do this as following:
Press **[vol]** [The current voice volume appears on the display]. → Choose a level from 1 to 5 by using the keypad. → Press **[vol]** to confirm.

MUTE-KEY

During a call, press the **[*]** key to switch the microphone off. [***x** appears on the display. The person on the other end of the line can not hear you, but you can hear the person on the other end of the line]. → Press the **[*]** key to switch the microphone back on.



SPEAKERPHONE-KEY

With this key you can switch on the Speakerphone of the handset to make a completely handsfree call.

Press **[SPK]** → On the display appears **[SPK]**. → Press **[SPK]** again to switch off the microphone and to continue your conversation without Speakerphone via the handset. → Press **[END]** to finally end the call.

Remark:

During a call you can adjust the volume of the speakerphone as indicated above in the chapter "Adjusting the voice volume".

REVIEWING AND DIALING THE LAST DIALLED NUMBERS

With the SAFE DECT you can review the 5 last numbers that were dialled with this phone.

The handset is in Standby-mode. → Press **[RECALL]**: the last dialled number appears on the display. → Press **[RECALL]** again to review the previous number. → Finally press **[END]** to dial the number that is now showing on the display.

CALL DURATION

The telephone automatically shows the duration of the calls.

This remains on the display during a few seconds after the call, before it turns back to Standby-mode.

HANDSET-SEARCH-BUTTON

Press the **[SEARCH]** key of the base unit very shortly to page the handset that has gone missing. → The handset beeps for a moment.
→ Press any key of the handset to stop the beeping.

REGISTERING HANDSET TO THE BASE UNIT

Handset 1: in Standby-mode you read from the display: *"BL-1 HS-1"*.

If it, by pressing a wrong key appears that the handset is not registered to the base unit anymore, you can still do the following:

How to proceed?

Press during 10 sec. **[*]** of the base unit. [The red LED on the base unit starts to flash]. → Press **[*]** of the handset you would like to register. → Press **[*]** until *"BASE SEARCH"* appears on the display. → Press **[*]** followed by the base unit number.

GB - 15



→ Press (☞): [The T icon flashes and on the display appears "5296Z/110" followed by a code]. → Press (☞) again and enter the PIN-Code (with delivery = 0000). → Press (☞): [If registering has succeeded, you will hear a confirmation beep].

Important!

The base unit stays during 3 min. in registering-mode. If registering the handset has not gone well, you could better start all over again.

THE PHONEBOOK-MEMORY

You can store 50 names and numbers in the Phonebook of the SAFE DECT.

STORING A NUMBER AND NAME IN THE PHONEBOOK-MEMORY

The phone is in Standby-mode.
Enter the phone number that you wish to store. → Press (☐). → Then enter the name that you wish to store. [Use the keypad to programme the name]. → Press (☐) again. [You will hear a confirmation beep. When the memory is full, you will hear 3 short beeps]. → Use (☒) to delete a wrong entry.

Use of the keypad

Key	Press once	Press twice	Press 3 times	Press 4 times	Press 5 times	Press 6 times	Press 7 times	Press 8 times	Press 9 times
1	+	-	/	1	b	c	2		
2	A	B	C	a			3		
3	D	E	F	d	e	f	4		
4	G	H	I	g	h	i	5		
5	J	K	L	j	k	l	6		
6	M	N	O	m	n	o	7		
7	P	Q	R	p	q	r	8	s	7
8	T	U	V	t	u	v	9		
9	W	X	Y	w	x	y		z	
0	space	-	0	Z	X	Y			9

GB - 16





To programme "LUXE", you press:
3 x (5), 2 x (8), 2 x (9), 2 x (3).

SEARCHING A NUMBER IN THE PHONEBOOK

The phone is in Standby-mode.

Press (☐) → Use the (⬆) key to start the searching. [With this key you can scroll through the Phonebook-memory.] → At the beginning of the list you can scroll again through the names and numbers in the other direction with the (⬆) key.

CALLING A NUMBER OF THE PHONEBOOK

2 possibilities:

1. The phone is in Standby-mode.
 - Press (☐) and use the (⬆) key to scroll through the Phonebook-memory;
 - Press (☎) when the required number appears on the display.
2. The phone is in Standby-mode.
 - Press (☎).
 - Press (☐) and use the (⬆) key to scroll through the Phonebook-memory;
 - Press (☎) when the required number appears on the display.



DELETING A NUMBER AND NAME FROM THE PHONEBOOK-MEMORY

The phone is in Standby-mode.

Press (☐) → Use the (⬆) key to go to the number that you would like to delete. → Press (☒). [On the display appears "DELETE?"] → Press (☎) to confirm. [You will hear a confirmation beep]. → Press the (☎) key to exit the Phonebook-memory.

EDITING A NUMBER AND NAME OF THE PHONEBOOK-MEMORY

Press (☎) → Press the (⬆) key until "PHONEBOOK" appears on the display. → Press (☎). → Press the (⬆) key again until "EDIT" appears on the display. → Press (☎) and use the (⬆) key to scroll through the Phonebook-memory. → Press (☎) again when the number that you would like to edit appears on the display. → Edit the name and in order to do this you can use f.i. the (☒) key (see table p. 16). → Press (☎) to confirm the correct name. → Edit the number. → Press (☎) to confirm the correct number. [You will hear a confirmation beep].

GB - 17




CALLER ID (CLIP)

Before you can use this service, you first have to take a Caller ID-subscription with your telephone company.

- With Caller ID you can see, before you pick up the phone, the number of the person that is calling you on the display of the SAFE DECT.
- If this number already has been stored in your Phonebook, the name also appears on the display.
- However, this is not the case if the caller has blocked the CLIP-function.
- With Caller ID you can also see all the numbers that called you during your absence.
- You can call these numbers directly and/or store them in the Phonebook.
- The SAFE DECT has a Caller ID memory of 30 numbers.

REVIEWING NUMBERS

- flashes: new calls have been stored in the Caller ID memory.
- stops flashing as soon as you have seen all the new calls.
- Press (F10): on the display appears when the last number was stored.

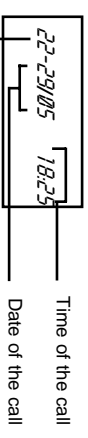

- Place in the Caller ID-memory
- Press (R↓) to review the stored number (with possible indication of the name).
- Press (F10) again to go to the previously stored number and use the (R↓) key again to receive extra information.
- This way you can review the complete Caller ID memory.
- Use the (F9) key to exit the list.



CALLING NUMBERS FROM THE CALLER ID LIST

Press (T) until the required number appears on the display. → Press the (R) key. [The number is dialled].

STORING NUMBERS FROM THE CALLER ID LIST IN THE PHONEBOOK

Press (T) until the required number appears on the display. → Press the (B) key until "STORE" appears on the display.

→ Press the (S) key to store the number. → To add a name to the number, you proceed the same way as described in the chapter "Editing a number and name of the Phonebook-memory" (p. 17).

DELETING NUMBERS FROM THE CALLER ID LIST

Press (T) until the number that you would like to delete appears on the display. → Press the (X) key to delete the number.

→ Press the (S) key to confirm. [You will hear a confirmation beep].

DIRECT CALL

WHEN DO YOU USE THIS FUNCTION?

If you programme a number under "Direct Call" and turn it ON, this number will be automatically dialled out if you press any key.

Example: If your child is home alone and you wish to be reachable in a very easy way, you can programme under "Direct Call" your mobile phone number for instance. This number will then be dialled out immediately by pressing any key of the SAFE DECT.

PROGRAMMING THE DIRECT CALL NUMBER

Press the (S) key. → Press the (T) key until "DIRECT" appears on the display. → Press the (S) key again. ["NUMBER" appears on the display]. → Enter the Direct Call number. → Press the (S) key to confirm. → If necessary, you can always delete or change the currently programmed number by using the (X) key.

TURNING THE DIRECT CALL NUMBER ON

Press the (S) key. → Use the (T) key until "DIRECT" appears on the display. → Press the (X) key for 2 seconds until "DIRECT ON" appears on the display. → You will hear a confirmation beep. → This Direct Call number will now be dialled out automatically if you press any key. → To end the conversation, press the (S) key.

GB - 19



TURNING THE DIRECT CALL NUMBER OFF

Press the  key twice. → You will hear a confirmation beep. → The SAFE DECT will return to Standby-Mode.

IMPORTANT SAFETY MEASURES

- When you charge this product, a certain amount of heat will be produced.
- Do not put this product on antique, veneered or wooden surfaces to avoid damage.
- To avoid interference with other electronic appliances, such as a TV, radio or PC, you should place this product at least 1 meter away.
- The effective range of this product is dependant on the local environment, such as building materials, the proximity of dense trees, ponds, lakes or the sea.
- Do not use this product near water or in a damp environment, such as a bathroom.
- Do not expose this product to fire, direct sunlight or intense heat.
- For safety measures do not use this product near a gas-leak that you found and want to report.
- Clean this product with a damp anti-static cloth.
- Do not use fluid detergents or sprays.



GB - 20

M_Safe_Dect_GB_pmd

20



21.12.2004, 11:01