



TABLE OF CONTENTS

INTRODUCTION 19
SETTING UP THE PREMIER® WORLD I-PHONE ON YOUR PC 19
APPLICATIONS 21
DESELECTING THE PREMIER® WORLD I-PHONE 23





INTRODUCTION

VoIP (Voice over Internet Protocol) is a technology which uses the Internet to make telephone calls. Analog voice signals are highly compressed and converted into digital form. These digital signals are transmitted through a computer network, like the Internet. With VoIP you can make free telephone calls, you only have to pay the costs of your Internet subscription! This way, VoIP provides an interesting alternative to traditional telephone communication.

Your Premier® World i-phone is an USB IP telephone which simply has to be plugged into your PC to make VoIP-dialing possible.

SETTING UP THE PREMIER® WORLD I-PHONE ON YOUR PC

Connect the USB plug of your VoIP Phone to the USB socket on your PC.

When you plug in the World i-phone for the first time, all audio output (for example music) and input (i.e., speech that would otherwise be input to the microphone) will be automatically re-routed to the USB phone. If you did not see this happen, please set it manually as described below.

1. Go to the Start Menu. Select 'Settings' and then 'Control Panel'. Select the Multimedia icon.
2. Click the drop-down menu to select 'USB Audio Device' in **both** 'Playback' and 'Recording' setting.
3. Then click 'OK' to confirm and exit.

For Window 98 users

1. Connect the USB plug of your World i-phone to the USB socket on your PC.
2. Windows will detect your new VoIP Phone.
 - a. You will see a 'Found New Hardware' message on the screen.
 - b. You may also see a 'Building driver database' progress bar.
3. The 'Add New Hardware Wizard' dialog box will be displayed.



- a. It will identify the new hardware as 'USB Composite Device'.
 - b. Click 'Next'.
4. The next part asks 'What do you want Windows to do?'.
a. There are two options:
i. Search for the best driver for your device (Recommended).
ii. Display a list of all the drivers in a specific location so you can select the driver you want.

b. Make sure the radio button for the first option (4.a.i) is checked.

c. Click 'Next'.

5. The next part will tell you 'Windows will search for new drivers in its driver database on your hard disk and in any of the following selected locations'.
a. None of the additional locations need to be selected (un-check each of them).
b. Click 'Next'.

6. The next part will inform you that Windows has found the driver.
a. Click 'Next'.

7. Windows will now install the driver.
a. You may be informed that your original Windows installation CD-ROM is required.
b. You will be informed once the installation is complete.

8. Click 'Finish'.

9. The 'Add New Hardware Wizard' dialog box will be displayed again.
a. It will identify the new hardware as 'USB Human Interface Device'.
b. Click 'Next'.

10. Just step through the installation process (i.e. steps 4 to 8 above) as you did before.

11. The 'Add New Hardware Wizard' dialog box will be displayed once more.
a. It will identify the new hardware as 'USB Audio Device'.
b. Click 'Next'.

12. Just step through the installation process (i.e. steps 4 to 8 above) as you did before.

13. Congratulations, your World i-phone is now installed.





APPLICATIONS

1. SKYPE™

Skype™ is software which allows you to make free telephone calls through the Internet with other Skype™ users.

Downloading and installing the application software of Skype™

1. Download the latest version of Skype™ application software in www.skype.com. Install the application software on your PC.
2. Fill in the profile and follow the instructions to get registration.
3. After having installed the application software, you will see a window displayed.
See illustration 2, page 6.
4. To search the other Skype™ user with whom you like to have a telephone conversation, please click 'Search for Skype users'(a) or enter a name in the full name blank (b). You will see a list of names that match your searching details.
See illustration 3, page 7.
5. You can add your friend into your contact list by selecting the correct name (c) and then sending an invitation message by clicking the corresponding icon (d).
6. Finally, you will see the name of your friend in your contact list. If you want to call this friend, just use your mouse to highlight the name (e) and then press the 'Call' icon (f).
See illustration 4, page 8.
7. To end your call, click the 'Hang up' icon (g) or just hang up your World i-phone.

Note: For more detailed information about the Skype™ software and its functions, please consult the user guide on www.skype.com.



M_World_L_Phone_GB.pmd

21



English

21

16:12:2004, 16:00





2. MSN® MESSENGER

Downloading and installing the application software of MSN® Messenger

1. Download the latest version of Messenger software in www.msn.com.
2. Follow the instructions to install the software on your PC.
3. After having installed the application software, you will see a following window displayed. Click the "Sign in" button to start Messenger.
See illustration 5, page 10.
4. You will see your online and offline contacts. If you want to call a contact, select the name of the contact. Click 'Actions' and then 'Start an audio conversation' (a) or double-click the name of the contact you want to call, and then click the 'Audio' icon (b).
See illustrations 6 & 8, page 11 & 12.
5. The first time you want to use your World i-phone for making a phone call with Messenger, the Audio Tuning Wizard will start.
 - a. Read the displayed instructions and click 'Next'.
 - b. Do the same on the next window.
 - c. When the 'Select the microphone and speakers' window appears.
 - From the dropdown lists for both microphone and speakers select 'USB Audio Device';
 - Click 'Next';
 - d. On the next screen you will adjust the audio level of the speaker in your World i-phone.
 - Click the button 'Click to test speakers';
 - Whilst listening to the tones being played through your VoIP Phone use the slider bar to set a comfortable audio volume.
 - e. On the next screen you will adjust the microphone sensitivity of your VoIP Phone.
 - Move the slider bar all the way to the right.



- Now, with the mouthpiece at a comfortable position and distance from your mouth, read the text on the screen out loud.
 - As you read, the slider bar will be automatically adjusted to a suitable level.
 - Click 'Next' when the microphone level has been set.
 - f. To finish the audio tuning, click 'Finish'.
 - g. You are now ready to use your World i-phone with Messenger and make a phone call.
 - 6. To end the call, click 'Actions' and then 'Stop audio' or click the 'Audio' icon.
- Note:** You will not end the call just by hanging up your World i-phone.

DESELECTING THE PREMIER® WORLD I-PHONE



When you plug in the World i-phone for the first time to use this VoIP phone, all audio output (for example, music) and input (i.e., speech that would otherwise be input to the microphone) will be automatically re-routed to the USB phone.

To deselect the World i-phone as your default audio input/output (so you can still enjoy music over your computer speakers, for example) follow the enclosed instructions.

In order to switch the preferred (or default) setting of your Windows Operating System to an option that is not a USB audio device, please perform the following steps:

If you have Windows 98 First Edition/ Second Edition:

1. Go to the Start Menu.
2. Select 'Settings'.
3. Select 'Control Panel'.
4. Double Click on the 'Multimedia' icon.
5. Select the 'Audio Tab'.



M_World_L_Phone_GB.pmd

23



English

23

16:12:2004, 16:00





6. If the Preferred device for Playback is a USB audio device, change it using the drop down menu to an option other than the USB audio device (i.e., one that will select your computer's speakers). Examples include: SoundMax Digital Audio, ESS Maestro3.
7. If the Preferred device for Recording is a USB audio device, change it using the drop down menu to an option other than the USB audio device.
8. Click 'Apply'.
9. Click 'OK' to close the panel.

If you have Windows ME:

1. Go to the Start Menu.
2. Select 'Settings'.
3. Select 'Control Panel'.
4. If the window does not display all of the icons, click on 'View all Control Panel options' on the left side of the screen. (Note that once this is performed, the control panel will always display all of the control panel icons, so this step need only be performed once.)



See *Illustration 8, page 15.*

5. Double Click on the 'Sounds and Multimedia' icon.
6. Select the 'Audio' Tab.
7. If the Preferred device for Sound Playback is a USB audio device, change it using the drop down menu to an option other than the USB audio device (i.e., one that will select your computer's speakers). Examples include: SoundMax Digital Audio, ESS Maestro3.
8. If the Preferred device for Sound Recording is a USB audio device, change it using the drop down menu to an option other than the USB audio device.
9. Click 'Apply'.
10. Click 'OK' to close the panel.





If you have Windows 2000:

1. Go to the Start Menu.
2. Select 'Settings'.
3. Select 'Control Panel'.
4. Double click on the 'Sounds and Multimedia' icon or select the 'Sounds and Multimedia' tab if it is accessible as a tab from the Control Panel.
5. Select the 'Audio' Tab.
6. If the Preferred device for Sound Playback is a USB audio device, change it using the drop down menu to an option other than the USB audio device (i.e., one that will select your computer's speakers). Examples include: SoundMax Digital Audio, ESS Maestro3.
7. If the Preferred device for Sound Recording is a USB audio device, change it using the drop down menu to an option other than the USB audio device.
8. Click 'Apply'.
9. Click 'OK' to close the panel.



If you have Windows XP:

1. Go to the Start Menu.
2. Select 'Control Panel'.
3. Click the 'Sounds, Speech, and Audio Devices' Link.
4. Click the 'Sounds and Audio Devices' Link.
5. If the Default device for Sound Playback is a USB audio device (e.g., it may indicate USB Digital Audio), change it using the drop down menu to an option other than the USB audio device (i.e., one that will select your computer's speakers). Examples include: SoundMax Digital Audio, ESS Maestro3.
6. If the Default device for Sound Recording is a USB audio device, change it using the drop down menu to an option other than the USB audio device.



M_World_L_Phone_GB.pmd

25



English

25

16:12:2004, 16:00





- 7. Click 'Apply'.
- 8. Click 'OK' to close the panel.

Skype™ is a registered trademark of Skype Technology SA
Microsoft, Windows, MSN® is a registered trademark of Microsoft Corporation



M_World_L_Phone_GB.pmd

26

English

26

16:12:2004, 16:00